







Emergency Standby Power (ESP):

Applicable for supplying power to varying electrical load for the duration of power interruption of a reliable utili ty source. Emergency Standby Power (ESP) is in accordance with ISO 8528. Fuel Stop power in accordance with ISO 3046, AS 2789, DIN 6271 and BS 5514.

Prime Power (PRP):

Applicable for supplying power to varying electrical load for unlimited hours. Prime Power (PRP) is in accordance with ISO 8528. Ten percent overload capabili ty is avai lable in accordance with ISO 3046, AS 2789, DIN 6271 and BS 5514.

Continuous Power (COP):

Applicable for supplying power continuously to a constant electrical load for unlimi ted hours. Continuous Power (COP) in accordance wi th ISO 8528, ISO 3046, AS 2789, DIN6271 and BS 5514.

POWERZOO generators are CE certified and conform to the following Directives:

- •EN 12100: 2010, EN ISO 8528-13: 2016, EN 60204-1: 2018,
- •EN 61000-6-2: 2019, 2006/42/CE Machinery safety
- •2014/35/EU Low voltage
- •2014/30/EU Electromagnetic compatibility
- •Power according to ISO 8528 and ISO 3046
- $\mbox{^{\circ}}\mbox{Ambient}$ reference conditions 1000 mbar, 25 $\mbox{^{\circ}}\mbox{^{\circ}}\mbox{^{\circ}}$ C, 30% relative humidity. Information based on standard specification equipment unless otherwise stated.

	GENERATOR MODEL		C313P5		
	Generator specificationsl		PRP	ESP	
•	Power	kW/kVA	250/313	280/350	
(2)	Rated speed	r.p.m.	1500		
v	Available voltages	V	380~415		
50 60 HZ	Frequency	Hz	50		
3	Phase		3-PH		
	Power factor	Cos Φ	0.8		
	Fuel cons 100%	L/H	70		
	Starting power	kW	9		
âñ	Recommended battery	Ah	100		
	Number of batteries			2	
	Auxiliary voltage	VDC	24V		


















Dimension and Weight

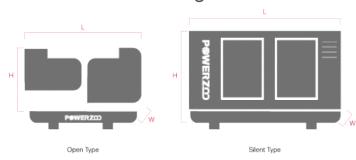

	DIMENSION		OPEN TYPE	SILENT TYPE
砂田	Length (L)	mm	2820	3962
Q HI	Width (W)	mm	1300	1356
	Height (H)	mm	1650	2152
Kg	Dry weight	kg	2600	3200
	Fuel tank	L	NA	650

POWERZOO has the right to modify any feature without prior notice. Weights and dimensions based on standard products. Illustrations may include optional equipment. Technical data described in this catalogue correspond to the available information at the moment of printing. The illustrations and images are indicative and may not coincide in their entirety with the product. Industrial design under patent.









Engine Specifications

ENGINE	Cummins [®]
Engine model	6LTAA9.5-G1
Number of cylinders	6
Cylinder arrangement	Vertical in-line
Cycle	Four stroke
Aspiration	Turbocharged & charge air cooled
Bore × Stroke	116.5 × 148 mm
Displacement	9.5 L
Compression ratio	16.6:01
Prime power/Speed	290/1500 (kW/rpm)
Standby power/Speed	320/1500 (kW/rpm)
Speed governor	Electronic
Cooling system (open type)	40°C tropical radiator
Cooling system (silent type)	50° tropical radiator

ENGINE	Cummins [®]
Total lubrication system capacity	32.4 L
Coolant capacity (with radiator)	57.1 L
Speed stability (%)	≤3%
Start type	Electrical
Maximum exhaust temperature	600℃
Exhaust gas flow	25 Kg/Min
Maximum allowed back pressure	10 kPa
Intake air flow	310 L/S
Cooling air flow	6.442 m³/S
Consumption @ 100% load ESP	78 L/H
Consumption @ 100% load PRP	70 L/H
Consumption @ 75% load PRP	52 L/H
Consumption @ 50% load PRP	35 L/H



Features:

- •Diesel engine
- •4-stroke cycle
- •Water-cooled

- •Dry air filter
- •Radiator with pusher fan
- •Moving parts protection
- •Radiator water level sensor (Optional)
- •55 degree radiator (Optional)

- Jacket coolant heater (Optional)
- •Lube oil heater (Optional)
- •Engine filter heater (Optional)
- •Fuel inlet line heater (Optional)
- •Heavy duty air filter (Optional)



Alternator Specification

ALTERNATOR	
Exciter type	Brushless, self-excited
Power factor	0.8
Voltage adjust range	≥5%

ALTERNATOR	
Voltage regulation NL-FL	≤±1.0%
Insulation grade	Н
Protection grade	IP23



Options:

- •AREP/PMG/EBS
- •Air inlet filter (5% deration)
- •louver (5% deration)
- •Space heater
- Digital AVR
- •Severe environmental impregnation
- •Stator sensor
- •PT100

- •Rotor sensor
- Double bearing
- •Drip proof cover
- •Terminal box IP44







Controller Brands

















Controller Functions

OPTIONAL CONFIGURATION	Stand-alone Basic	Stand-alone Advanced	Synchronization Basic	Synchronization Advanced
Voltage between phases	•	•	•	•
Voltage between neutral and phase	•	•	•	•
Current intensities	•	•	•	•
Frequency	•	•	•	•
Apparent power (kVA)	•	•	•	•
Active power (kW)	•	•	•	•
Reactive power (kVAr)	•	•	•	•
Power factor	•	•	•	•
Coolant temperature	•	•	•	•
Oil pressure	•	•	•	•
Battery voltage	•	•	•	•
R.P.M.	•	•	•	•
Battery charge alternator voltage	•	•	•	•
High water temperature by sensor	•	•	•	•
Low oil pressure by sensor	•	•	•	•
Unexpected shutdown	•	•	•	•
Fuel storage by sensor	•	•	•	•
Stop failure/Start failure	•	•	•	•
Overspeed/Underspeed	•	•	•	•

● Standard ○ Optional



OPTIONAL CONFIGURATION	Stand-alone	Stand-alone	Synchronization	Synchronization
	Basic	Advanced	Basic	Advanced
Emergency stop	•	•	•	•
High/Low frequency	•	•	•	•
High/Low voltage	•	•	•	•
Short-circuit	•	•	•	•
Incorrect phase sequence	•	•	•	•
Inverse power	•	•	•	•
Overload	•	•	•	•
Total hour counter	•	•	•	•
Kilowatt meter	•	•	•	•
Starts valid counters	•	•	•	•
Maintenance	•	•	•	•
USB	•	•	•	•
Software for PC	•	•	•	•
Alarm history	•	•	•	•
External start	•	•	•	•
Start inhibition	•	•	•	•
Mains failure start	•	•	•	•
Pre-heating engine control	•	•	•	•
Fuel transfer control	•	•	•	•
Engine temperature control	•	•	•	•
Programmable alarms	•	•	•	•
Genset start function in test mode	•	•	•	•
Programmable outputs	•	•	•	•
Multilingual	•	•	•	•
RS485		•	•	•
Modbus IP		•	•	•
J1939		•	•	•
Synchronization			•	•
Mains synchronization				•
Fuel level (%)	0	0	0	0
Low water level	0	0	0	0
GSM/GPRS modem	0	0	0	0
Remote screen	0	0	0	0

● Standard ○ Optional

