W1625P5

Powered by Weichai®

WEICHAI





Emergency Standby Power (ESP):

Applicable for supplying power to varying electrical load for the duration of power interruption of a reliable utili ty source. Emergency Standby Power (ESP) is in accordance with ISO 8528. Fuel Stop power in accordance with ISO 3046, AS 2789, DIN 6271 and BS 5514.

Prime Power (PRP):

Applicable for supplying power to varying electrical load for unlimited hours. Prime Power (PRP) is in accordance with ISO 8528. Ten percent overload capabili ty is avai lable in accordance with ISO 3046, AS 2789, DIN 6271 and BS 5514.

Continuous Power (COP):

Applicable for supplying power continuously to a constant electrical load for unlimi ted hours. Continuous Power (COP) in accordance wi th ISO 8528, ISO 3046, AS 2789, DIN6271 and BS 5514.

POWERZOO generators are CE certified and conform to the following Directives:

- •EN 12100: 2010, EN ISO 8528-13: 2016, EN 60204-1: 2018,
- •EN 61000-6-2: 2019, 2006/42/CE Machinery safety
- •2014/35/EU Low voltage
- •2014/30/EU Electromagnetic compatibility
- •Power according to ISO 8528 and ISO 3046
- $\mbox{^{\circ}}\mbox{Ambient}$ reference conditions 1000 mbar, 25 $\mbox{^{\circ}}\mbox{^{\circ}}$ C, 30% relative humidity. Information based on standard specification equipment unless otherwise stated.

	GENERATOR MODEL		W1625P5		
	Generator specificationsl		PRP	ESP	
•	Power	kW/kVA	1300/162 5	1440/1800	
(2)	Rated speed	r.p.m.	1500		
v	Available voltages	V	380~415		
50 60 HZ	Frequency	Hz	50		
3 _{ph}	Phase		3-PH		
	Power factor	Cos ϕ	0.8		
	Fuel cons 100%	L/H	343		
	Starting power	kW	NA		
árà	Recommended battery	Ah	80		
	Number of batteries		8		
	Auxiliary voltage	VDC	2	24V	
















Dimension and Weight

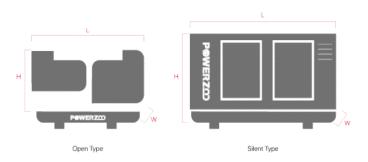

	DIMENSION		OPEN TYPE	SILENT TYPE
0 円	Length (L)	mm	5400	12192
Ø. #I	Width (W)	mm	2250	2438
	Height (H)	mm	2500	2591
Kg	Dry weight	kg	10600	NA
	Fuel tank	L	NA	NA

POWERZOO has the right to modify any feature without prior notice. Weights and dimensions based on standard products. Illustrations may include optional equipment. Technical data described in this catalogue correspond to the available information at the moment of printing. The illustrations and images are indicative and may not coincide in their entirety with the product. Industrial design under patent.









Engine Specifications

ENGINE	Weichai [®]		
Engine model	16M33D1580E310		
Number of cylinders	16		
Cylinder arrangement	V-Type		
Cycle	Four stroke		
Aspiration	Turbocharging and intercooling		
Bore × Stroke	150×185 mm		
Displacement	52.3 L		
Compression ratio	15:1		
Prime power/Speed	1440/1500 (kW/rpm)		
Standby power/Speed	1583/1500 (kW/rpm)		
Speed governor	ECU		
Cooling system (open type)	40°C tropical radiator		
Cooling system (silent type)	50°C tropical radiator		

ENGINE	Weichai [®]	
Total lubrication system capacity	114 L	
Coolant capacity (engine only)	100 L	
Speed stability (%)	≤3%	
Start type	Electrical	
Maximum exhaust temperature	550 ℃	
Exhaust gas flow	7352 L/s	
Maximum allowed back pressure	7.5 kPa	
Intake air flow	TBD	
Cooling air flow	TBD	
Consumption @ 100% load ESP	377.3 L/H	
Consumption @ 100% load PRP	343 L/H	
Consumption @ 75% load PRP	257.25 L/H	
Consumption @ 50% load PRP	171.5 L/H	



Features:

- •Diesel engine
- •4-stroke cycle
- •Water-cooled

- •Dry air filter
- •Radiator with pusher fan
- Moving parts protection
- •Radiator water level sensor (Optional)
- •55 degree radiator (Optional)

- Jacket coolant heater (Optional)
- •Lube oil heater (Optional)
- •Engine filter heater (Optional)
- •Fuel inlet line heater (Optional)
- •Heavy duty air filter (Optional)



Alternator Specification

ALTERNATOR	
Exciter type	Brushless, self-excited
Power factor	0.8
Voltage adjust range	≥5%

ALTERNATOR	
Voltage regulation NL-FL	≤±1.0%
Insulation grade	Н
Protection grade	IP23



Options:

- •AREP/PMG/EBS
- •Air inlet filter (5% deration)
- •louver (5% deration)
- •Space heater
- •Digital AVR
- •Severe environmental impregnation
- •Stator sensor
- •PT100

- •Rotor sensor
- Double bearing
- •Drip proof cover
- •Terminal box IP44
- Double bearing



E-mail: info@powerzoos.com Tel: +86 13358296663

W1625P5

Powered by Weichai[®]








Controller Brands

SmartGen

SmartGen



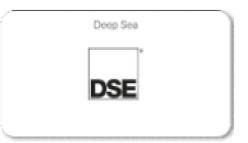

DEIF





Woodward



Controller Functions

OPTIONAL CONFIGURATION	Stand-alone Basic	Stand-alone Advanced	Synchronization Basic	Synchronization Advanced
Voltage between phases	•	•	•	•
Voltage between neutral and phase	•	•	•	•
Current intensities	•	•	•	•
Frequency	•	•	•	•
Apparent power (kVA)	•	•	•	•
Active power (kW)	•	•	•	•
Reactive power (kVAr)	•	•	•	•
Power factor	•	•	•	•
Coolant temperature	•	•	•	•
Oil pressure	•	•	•	•
Battery voltage	•	•	•	•
R.P.M.	•	•	•	•
Battery charge alternator voltage	•	•	•	•
High water temperature by sensor	•	•	•	•
Low oil pressure by sensor	•	•	•	•
Unexpected shutdown	•	•	•	•
Fuel storage by sensor	•	•	•	•
Stop failure/Start failure	•	•	•	•
Overspeed/Underspeed	•	•	•	•

● Standard ○ Optional



E-mail: info@powerzoos.com Tel: +86 13358296663

W1625P5 Powered by Weichai®





Emergency stop High/Low frequency High/Low voltage Short-circuit Incorrect phase sequence Inverse power Overload Total hour counter Kilowett meter Starts valid counters Maintenance USB Software for PC Alarm history Starten start Start Inhibition Mains failure start Pre-heating angine control Engine temperature control Engine temperature control Programmable alarms Genset start function in test mode Programmable autyuts Mothus IP J1939 Synchronization Mains synchronization Fuel level (%) Low water level GSMY GPPS modem Remote screen A	OPTIONAL CONFIGURATION	Stand-alone Basic	Stand-alone Advanced	Synchronization Basic	Synchronization Advanced
High/Low voltage Short-circuit Incorrect phase sequence Inverse power Overload Total hour counter Kilowatt meter Starts valid counters Maintenance ISS Software for PC Alarm history External start Start inhibition Mains failure start Pre-heating engine control Fuel transfer control Fuel transfer control Fuel gename be a sequence ISS Sansa Sansa ISS Modus IP J1939 Synchronization Mains synchronization Fuel level (%) Low water level Inverse power ISS Incorrect per ISS Incorrect	Emergency stop	•	•	•	•
Short-circuit	High/Low frequency	•	•	•	•
Incorrect phase sequence Inverse power Overload	High/Low voltage	•	•	•	•
Inverse power	Short-circuit	•	•	•	•
Overload •<	Incorrect phase sequence	•	•	•	•
Total hour counter	Inverse power	•	•	•	•
Kilowatt meter • • • Starts valid counters • • • Maintenance • • • USB • • • Software for PC • • • Alarm history • • • External start • • • Start inhibition • • • Mains failure start • • • Pre-heating engine control • • • Fuel transfer control • • • Engine temperature control • • • Engine temperature control • • • Programmable alarms • • • Genset start function in test mode • • • Programmable outputs • • • Multilingual • • • RS485 • • • Modbus IP • • • J1939 • • •<	Overload	•	•	•	•
Starts valid counters •	Total hour counter	•	•	•	•
Maintenance	Kilowatt meter	•	•	•	•
USB	Starts valid counters	•	•	•	•
Software for PC •	Maintenance	•	•	•	•
Alarm history External start Start inhibition Mains failure start Pre-heating engine control Fuel transfer control Engine temperature control Programmable alarms Genset start function in test mode Programmable outputs Multilingual RS485 Modbus IP J1938 Synchronization Mains synchronization Fuel level (%) Low water level GSM/GPRS modem	USB	•	•	•	•
External start • • • • Start inhibition • • • • Mains failure start • • • • Pre-heating engine control • • • • Fuel transfer control • • • • Engine temperature control • • • • Programmable alarms • • • • Genset start function in test mode • • • • Programmable outputs • • • • Multilingual • • • • RS485 • • • • Modbus IP • • • • J1939 • • • • Synchronization • • • • Mains synchronization • • • • Fuel level (%) • • • • Low water level • • • •	Software for PC	•	•	•	•
Start inhibition • • • Mains failure start • • • Pre-heating engine control • • • Fuel transfer control • • • Engine temperature control • • • Programmable alarms • • • Genset start function in test mode • • • Programmable outputs • • • Multilingual • • • RS485 • • • Modbus IP • • • J1939 • • • Synchronization • • • Mains synchronization • • • Fuel level (%) • • • Low water level • • • GSM/GPRS modem • • •	Alarm history	•	•	•	•
Mains failure start •	External start	•	•	•	•
Pre-heating engine control • </td <td>Start inhibition</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	Start inhibition	•	•	•	•
Fuel transfer control Engine temperature control Programmable alarms Genset start function in test mode Programmable outputs Multilingual RS485 Modbus IP J1939 Synchronization Mains synchronization Fuel level (%) Low water level GSM/GPRS modem	Mains failure start	•	•	•	•
Engine temperature control • </td <td>Pre-heating engine control</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	Pre-heating engine control	•	•	•	•
Programmable alarms •	Fuel transfer control	•	•	•	•
Genset start function in test mode ● ● ● Programmable outputs ● ● ● Multilingual ● ● ● RS485 ● ● ● Modbus IP ● ● ● J1939 ● ● ● Synchronization ● ● ● Mains synchronization ● ● ● Fuel level (%) ● ● ● Low water level ● ● ● GSM/GPRS modem ● ● ●	Engine temperature control	•	•	•	•
Programmable outputs ● ● ● Multilingual ● ● ● RS485 ● ● ● Modbus IP ● ● ● J1939 ● ● ● Synchronization ● ● ● Mains synchronization ● ● ● Fuel level (%) ● ● ● Low water level ● ● ● GSM/GPRS modem ● ● ●	Programmable alarms	•	•	•	•
Multilingual • • • • RS485 • • • • Modbus IP • • • • J1939 • • • • Synchronization • • • • Mains synchronization • • • • Fuel level (%) • • • • Low water level • • • • GSM/GPRS modem • • • •	Genset start function in test mode	•	•	•	•
RS485 • • • Modbus IP • • • J1939 • • • Synchronization • • • Mains synchronization • • • Fuel level (%) • • • • Low water level • • • • GSM/GPRS modem • • • •	Programmable outputs	•	•	•	•
Modbus IP ● ● J1939 ● ● Synchronization ● ● Mains synchronization ● ● Fuel level (%) ○ ○ ○ Low water level ○ ○ ○ GSM/GPRS modem ○ ○ ○	Multilingual	•	•	•	•
J1939 • • • Synchronization • • • Mains synchronization • • • Fuel level (%) • • • • Low water level • • • • • GSM/GPRS modem • • • • •	RS485		•	•	•
Synchronization • • Mains synchronization • • Fuel level (%) • • • Low water level • • • • GSM/GPRS modem • • • •	Modbus IP		•	•	•
Mains synchronization ● Fuel level (%) ○ ○ ○ ○ Low water level ○ ○ ○ ○ GSM/GPRS modem ○ ○ ○ ○	J1939		•	•	•
Fuel level (%) 0 0 0 Low water level 0 0 0 GSM/GPRS modem 0 0 0	Synchronization			•	•
Low water level 0 0 0 GSM/GPRS modem 0 0 0	Mains synchronization				•
GSM/GPRS modem	Fuel level (%)	0	0	0	0
	Low water level	0	0	0	0
Remote screen o o o	GSM/GPRS modem	0	0	0	0
	Remote screen	0	0	0	0

● Standard ○ Optional



E-mail: info@powerzoos.com Tel: +86 13358296663